

The DAN Website

Set Up

Instructions

for

Supervisory Management

INDEX

TOPIC	PAGE
Login & Procedure	2
Properties Page Set Up	3
Communication Page Set Up	5
Manual Auto	6

LOGIN

Once you have successfully logged onto your system on the DAN website, the index can be found across the top of the page, below the blue banner. To return to the 'main' index from a sub index place your cursor over the word 'main' and select 'Index'

IMPORTANT NOTES:


1. The supervisory function if required for both manual and automatically collected data must be set up for each independently. The instructions for both are identical.
2. When **ANY** change is made to a page it is necessary to scroll to the bottom of the page and **submit** the change. Once accepted by the DAN server you will be required to click **'OK'** to confirm the change.
3. SMS Messages will only be sent if the facility has been activated.
4. The maximum allowable number of characters that may be entered into any SMS message window is 98.

SET UP PROCEDURE

The set up and activation of the Supervisory/Management facility requires entries to be made on two pages. Firstly on the 'Properties' page followed by the 'Communications' page.

PROPERTIES PAGE SET UP

The Properties page is found by passing your cursor over the 'System' item and clicking on the drop down 'Properties'. The following page will be displayed.



Powerful Web Based
Data Logging Solutions

[Main](#) [Log Search](#) [Device](#) [User](#) [System](#) [Logout](#)

System Properties

GROUP IDENTIFICATION

GROUP ALIAS: 09092222

DEVICE IDENTIFICATION

ALIAS: DE20 Unit2

SERIAL NUMBER: 09092222 | DE20 Unit2

MOTHERBOARD NO: test

DAUGHTERBOARD NO: test

SIM CARD NO: 700052589

IMEI NO: 3512345

TELEPHONE: 0449275809

DATA DISPLAY FORMAT

CURRENT GMT IN USE: +10:00 [±HH:MM]

NEW GMT TO BE USED: +10:00 [±HH:MM]

AFTER: 2010-04-04 03:00 [YYYY-MM-DD HH:MM]

DATE TIME

CURRENT LOCAL TIME: Fri Sep 03 15:58:57 2010

SYSTEM FIRST ACTIVATED: 2010-02-22 [YYYY-MM-DD]

PARAMETERS LAST CHANGED: 2010-08-19 [YYYY-MM-DD]

CORRECTIVE ACTION ON ALARMS

TO BE NOTED: WITHIN 1 [Hours] 00 [Mins] OF EACH ALARM RECEIVED.

WHEN NOT NOTED: ☒ SEND E-MAIL ☒ SEND SMS

MESSAGE: Corrective action has not been entered

DAILY DATA ENTRY

BREAKFAST: BEFORE 16:11 [HH:MM]

LUNCH: BEFORE 16:11 [HH:MM]

DINNER: BEFORE 15:10 [HH:MM]

WHEN NOT NOTED: ☒ SEND E-MAIL ☒ SEND SMS

MESSAGE: Meal Data has not been entered

DAILY DATA CHECKING

TO BE CHECKED BY: DanSysUser [USER ID] BEFORE: 20:00 [HH:MM]

WHEN NOT CHECKED: ☒ SEND E-MAIL ☐ SEND SMS

MESSAGE: Data has not been checked

CONTACT

USER ID: 09092222

PASSWORD: CONFIRM PASSWORD:

NAME:

ADDRESS:

TEL (DAY):

TEL (AFTER HOURS):

Submit

works Pty Ltd. All rights reserved.

The sections to be set up on the 'Properties Page' in order to activate the supervisory system are detailed below:

CORRECTIVE ACTION ALARMS

TO BE NOTED: If the corrective actions facility is to be utilised against selected alarms this input provides for the time after which an alarm is registered by the system that the corrective action must be addressed. Corrective actions may be entered on the alarm search page.

WHEN NOT NOTED: When corrective actions are not addressed within the time limit set above, select email and/or SMS to be sent to the 'Regional Supervisor'

MESSAGE: Free script the message to be sent

DAILY DATA ENTRY

BREAKFAST: Enter the time each day by when this data should be entered

LUNCH: Enter the time each day by when this data should be entered

DINNER: Enter the time each day by when this data should be entered

WHEN NOT NOTED: When the daily data entry procedure is activated and the data is not entered by the time prescribed, an email and/or SMS may be sent to the Regional Supervisor

MESSAGE: Free script the message to be sent

DAILY DATA CHECKING

TO BE CHECKED BY: When daily checking of data is required to be carried out under the 'Data Search' – facility, this feature requires entry of the user ID of the person charged with undertaking the check along with the time by which the daily check is to be carried out. Entry of this information activates the facility.


WHEN NOT CHECKED: When the daily checking procedure is activated and the check is not carried out by the time prescribed, an email and/or SMS may be sent to the Regional Supervisor

MESSAGE: Free script the message to be sent

SUBMIT **Do not forget to submit changes**

COMMUNICATION PAGE SET UP

The Communications page is found by passing your cursor over the 'System' item and clicking on the drop down 'Comm Details'. The following page will be displayed.

**Powerful Web Based
Data Logging Solutions**

MainSystemLogout

Communication Details

DEVICE IDENTIFICATION

SERIAL NUMBER: 09092222 | DE20 Unit2

LOCATION: Sydney

TELEPHONES FOR SMS ALARMS

TELEPHONE 1: 0412277582 ☒ IN USE

TELEPHONE 2: ☐ IN USE

TELEPHONE 3: ☐ IN USE

TELEPHONE 4: ☐ IN USE

TELEPHONE 5: ☐ IN USE

E-MAIL ADDRESS FOR ALARMS

E-MAIL 1: yohan.choi@danmonitoring.com ☐ IN USE

E-MAIL 2: ian.schmahmann@danmonitoring.com ☒ IN USE

E-MAIL 3: ☐ IN USE

E-MAIL 4: ☐ IN USE

E-MAIL 5: ☐ IN USE

TELEPHONE APPROVED TO RESET DEVICE

TELEPHONE:

TELEPHONES THAT CAN RECEIVE INSTANTANEOUS DATA

TELEPHONE 1: 0412277582

TELEPHONE 2:

TELEPHONE 3:

TELEPHONE 4:

TELEPHONE 5:

TELEPHONE AND E-MAIL ADDRESS FOR REGIONAL SUPERVISOR

TELEPHONE :

E_MAIL : young_ygc@hotmail.com

REDCOAL

REDCOAL SMSKEY:

redcoal

CLICK HERE TO SET UP MESSAGING ACCOUNT WITH REDCOAL. PLEASE NOTE :
ON REGISTRATION WITH REDCOAL A "SMSKEY" WILL BE PROVIDED TO YOU.
TO COMPLETE THE SMS ACTIVATION, LOG IN AND ENTER THIS INFORMATION ABOVE.
TO TEST SUCCESSFUL ACTIVATION OF YOUR ALARM MESSAGING CLICK HERE: ☐

Submit

Once the 'Properties Page' set up has been completed, there is only one entry to be made on the communications page.

TELEPHONE AND EMAIL ADDRESS FOR REGIONAL SUPERVISOR


Insert the mobile phone number (if SMS activated) and email address for regional supervisor to receive overseeing alarm messages

SUBMIT

Do not forget to submit changes

Choose Manual and/or Auto in Turn

For systems that have both manual and automatic data collection capability, and you wish to have both supervised, select the alternative for set up. Once the first set up (Manual or Auto) is complete, select the alternative to finalise the set up. Both 'Properties' and Communication' pages are required to be set up for the alternative

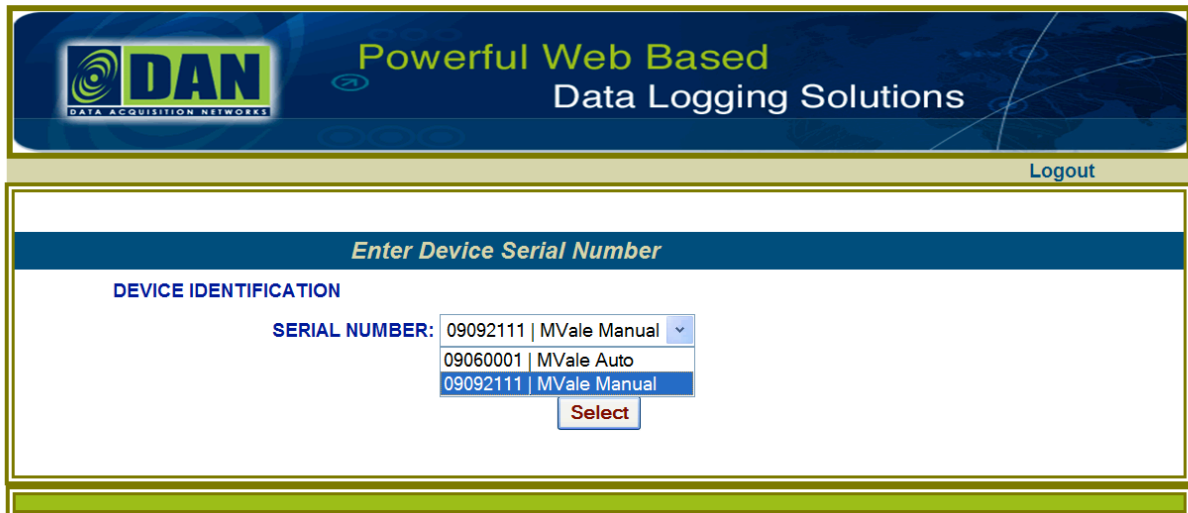

The screenshot shows the DAN (Data Acquisition Networks) web interface. The header features the DAN logo and the text "Powerful Web Based Data Logging Solutions". A "Logout" link is visible in the top right corner. The main content area is titled "Enter Device Serial Number" and contains a "DEVICE IDENTIFICATION" section. This section includes a "SERIAL NUMBER:" label followed by a dropdown menu. The dropdown menu is open, showing three options: "09092111 | MVale Manual", "09060001 | MVale Auto", and "09092111 | MVale Manual". A "Select" button is located below the dropdown menu.

Enter Device Serial Number	
DEVICE IDENTIFICATION	
SERIAL NUMBER:	09092111 MVale Manual ▼
	09060001 MVale Auto
	09092111 MVale Manual
	Select